

GIBRALTAR WEDGE KIT INSTALLATION INSTRUCTIONS
(8-415A Gibraltar Wedge kit)


S.R. Smith, LLC



**CORPORATE HEADQUARTERS
WESTERN SALES AND MANUFACTURING PLANT**
PO Box 400 • 1017 S.W. Berg Parkway
Canby, Oregon 97013
Phone (503) 266-2231 • Fax (503) 266-4334

EASTERN MANUFACTURING PLANT
PO Box 509 • 105 Challenger Drive
Portland, Tennessee 37148
Phone (615) 325-07701 • Fax (615) 325-0775


Package Contents:

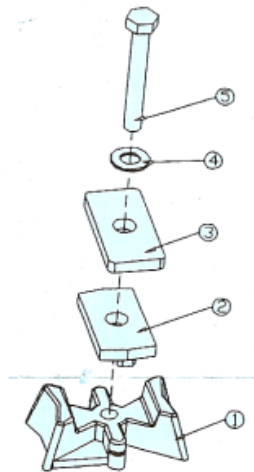

BILL OF MATERIALS		
BALN #	DESCRIPTION	QTY
1	GIBRALTAR WEDGE- YELLOW BRASS	1
2	GIBRALTAR WEDGE FLAT BAR W/ BOSS	1
3	GIBRALTAR WEDGE FLAT BAR- BRONZE	1
4	5/16 S/S FLAT WASHER	1
5	5/16-18 X 2 1/4 S/S HEX HEAD BOLT	1

Assembly Procedure:

1. Determine what type of anchor is installed in the Pool Deck.

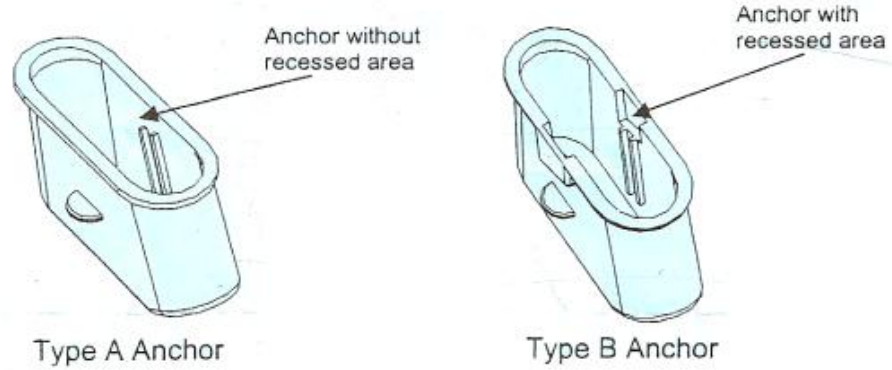

2. Place the wedge, wedge flat bar (wedge flat bar with boss is used on Type A Sockets only and the wedge flat bar without the boss is used on Type B Sockets only), washer, bolt, escutcheon plate and handrail in the anchor, respectively (refer to Figure below). If the flat bar with the boss is used, the boss shall face down in the anchor. Tighten the bolt down so that the handrail is secure in place.

